


- (I) - Procedere al montaggio seguendo le operazioni in ordine numerico progressivo.
(GB) - Proceed with assembling following the operations in progressive numerical order.
(D) - Arbeitsgänge in numerischer ordnung ausführen, um das gerät zu installieren.
(RU) - Производите установку в порядке увеличения обозначенных выше номеров.
(F) - Il faut procéder a le montage exécutant les operatoins par l'ordre numerique progressif.
(P) - Proceder a montagem segundo as istruções em ordem numerica progressiva.
(ES) - Proceder al montaje seguiendo las operaciones en orden numero progresivo.

F49 G01A-G02A-G03A-G04A




F49 G05A-G06A-G07A-G08A

1 MOUNT THE JOINTS

STRIP DIRECTION

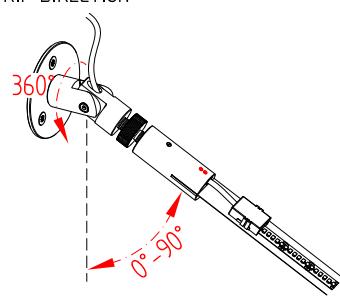

ORIENTABLE LIGHT

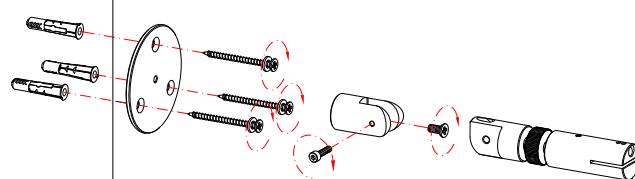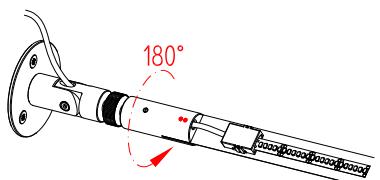


**ATTENTION: MOUNT JOINTS ONLY ON MASONRY CONSTRUCTION,
STUD, OR WALL WITH STRUCTURAL BACKING**

2 CUT THE METAL TAPE

X

measure distance from wall to wall

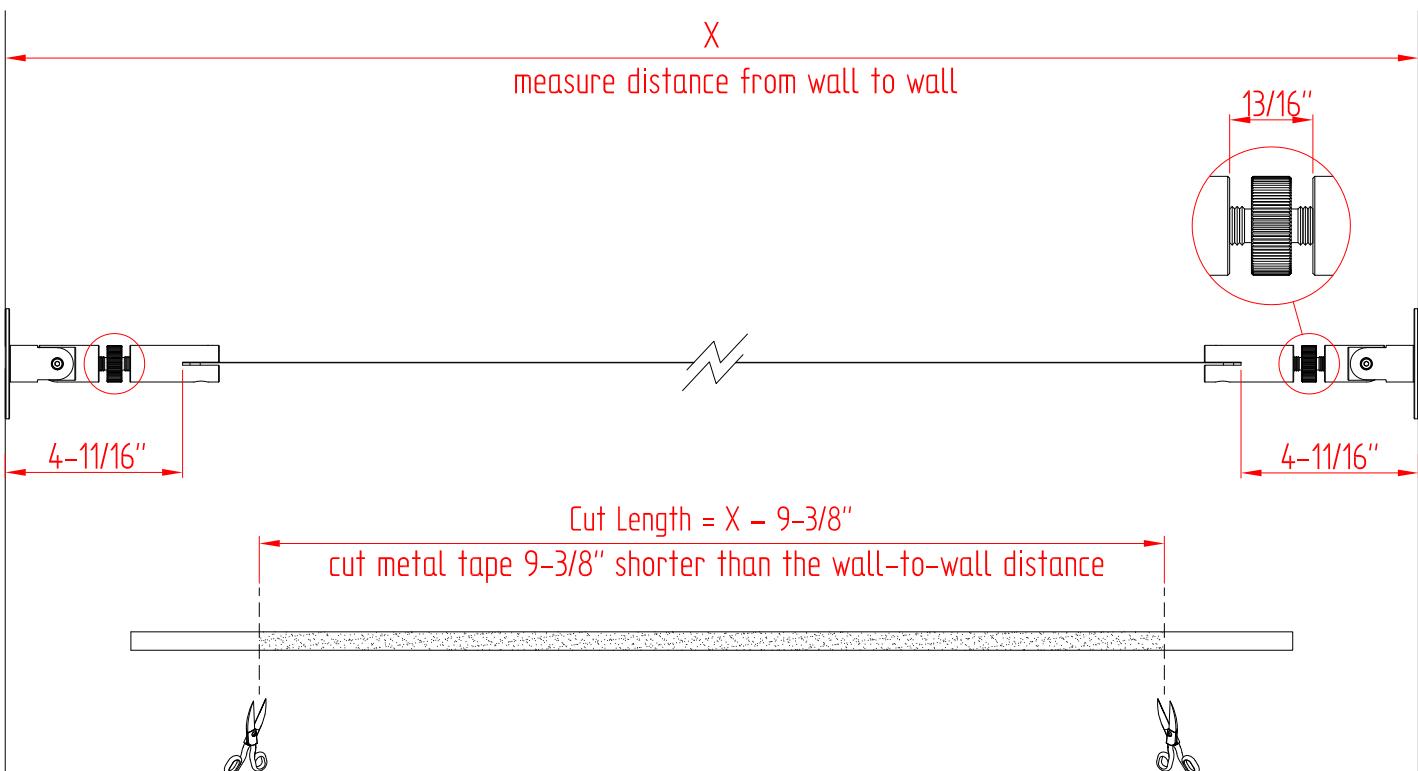


- (I) - Procedere al montaggio seguendo le operazioni in ordine numerico progressivo.
- (GB) - Proceed with assembling following the operations in progressive numerical order.
- (D) - Arbeitsgänge in numerischer ordnung ausführen, um das gerät zu installieren.
- (RU) - Производите установку в порядке увеличения обозначенных выше номеров.
- (F) - Il faut procéder a le montage exécutant les operatoins par l'ordre numerique progressif.
- (P) - Proceder a montagem segundo as istruções em ordem numerica progressiva.
- (ES) - Proceder al montaje seguiendo las operaciones en orden numerico progresivo.


3

SECURE THE METAL TAPE AND TURN TIGHTENING SCREW TO STRETCH THE SYSTEM

a

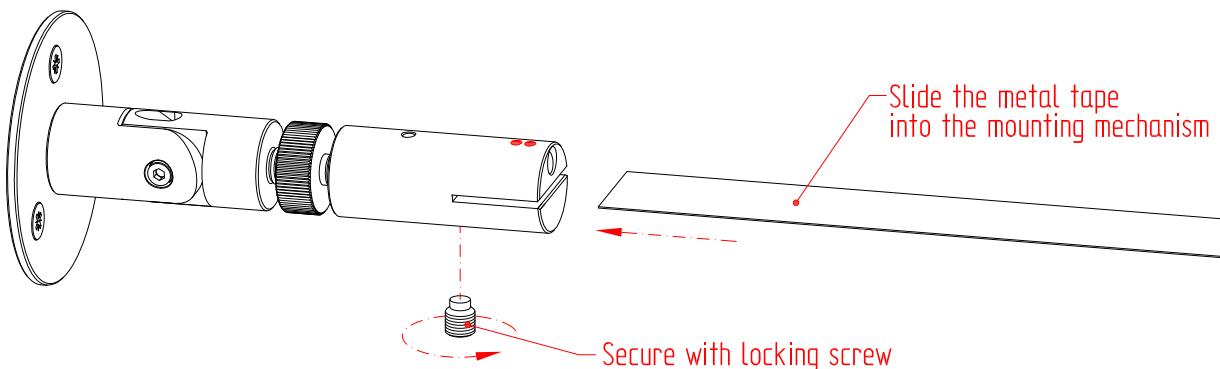


b



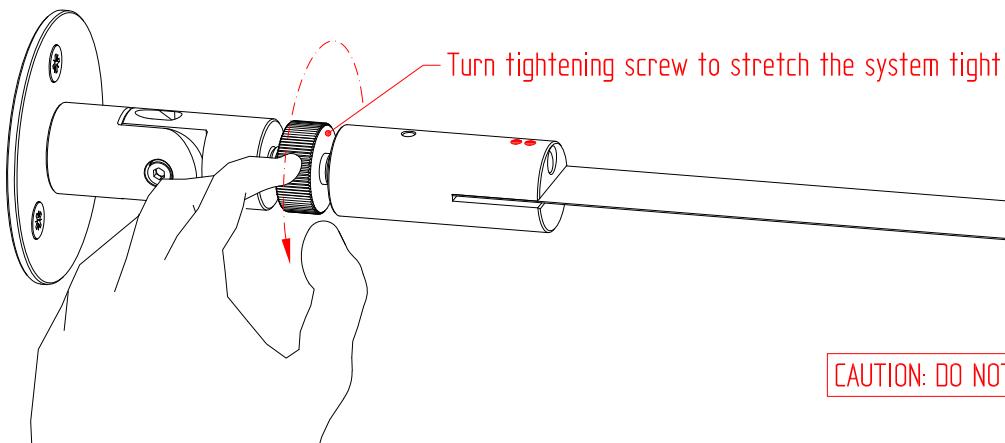


4

CENTER THE STRIP LED ON THE METAL TAPE

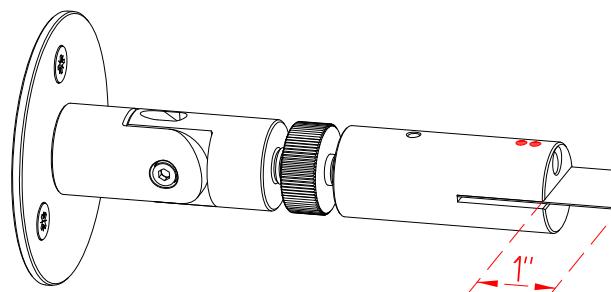

1x96W driver will power up to 16 feet of linear led
2x96W drivers will power up to 32 feet of linear led

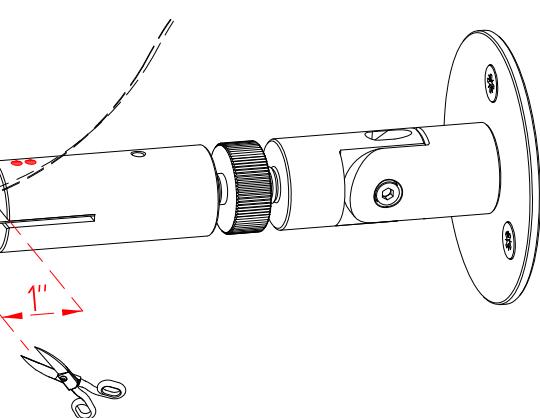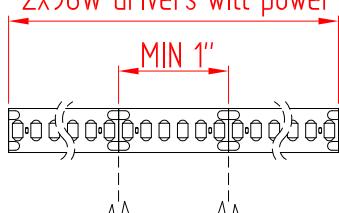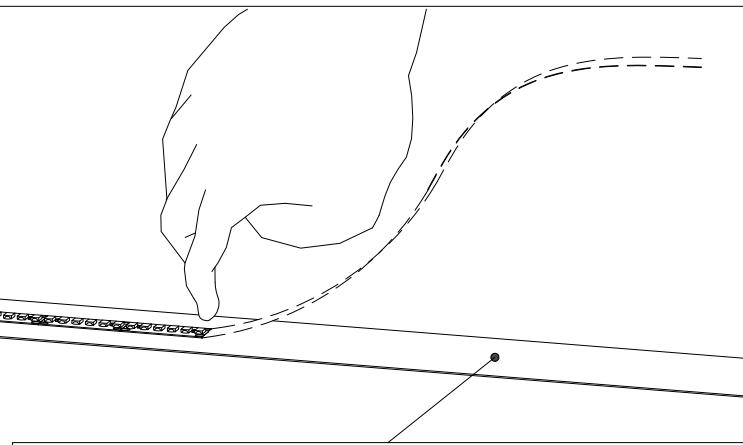

- (I) - Procedere al montaggio seguendo le operazioni in ordine numerico progressivo.
- (GB) - Proceed with assembling following the operations in progressive numerical order.
- (D) - Arbeitsgänge in numerischer ordnung ausführen, um das gerät zu installieren.
- (RU) - Производите установку в порядке увеличения обозначеных выше номеров.
- (F) - Il faut procéder a le montage exècutant les operatoins par l'ordre numerique progressif.
- (P) - Proceder a montagem segundo as istruções em ordem numerica progressiva.
- (ES) - Proceder al montaje seguiendo las operaciones en orden numerico progresivo.



F49 G01A-G02A-G03A-G04A

F49 G05A-G06A-G07A-G08A

5

INSERT ELECTRICAL CABLE IN TO THE WALL ATTACHMENT



CAUTION: DO NOT OVERTIGHTEN THE WIRE LOCKING SCREW!

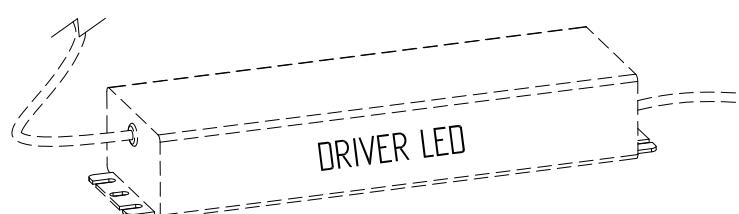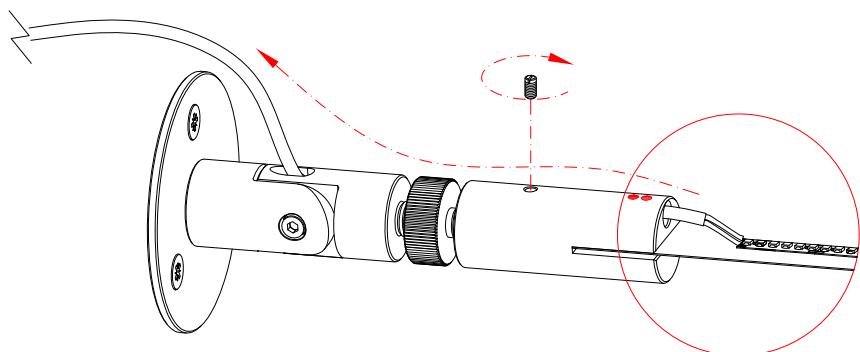

- (I) - Procedere al montaggio seguendo le operazioni in ordine numerico progressivo.
- (GB) - Proceed with assembling following the operations in progressive numerical order.
- (D) - Arbeitsgänge in numerischer ordnung ausführen, um das gerät zu installieren.
- (RU) - Производите установку в порядке увеличения обозначенных выше номеров.
- (F) - Il faut procéder a le montage exécutant les operatoins par l'ordre numerique progressif.
- (P) - Proceder a montagem segundo as istruções em ordem numerica progressiva.
- (ES) - Proceder al montaje seguiendo las operaciones en orden numerico progresivo.

F49 Z01

MOUNTING OF THE BRACKET FOR THE CURVATURE OF THE METAL TAPE

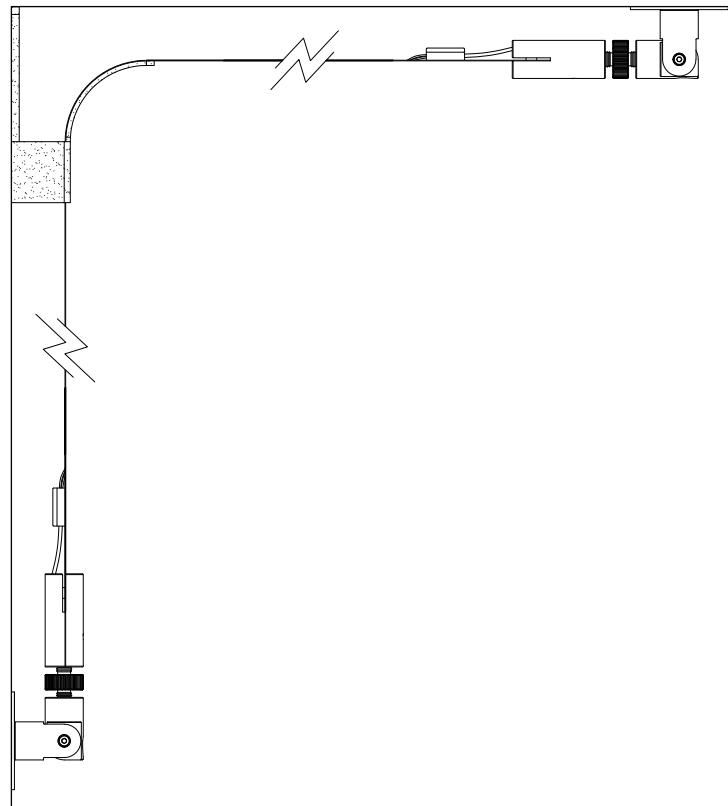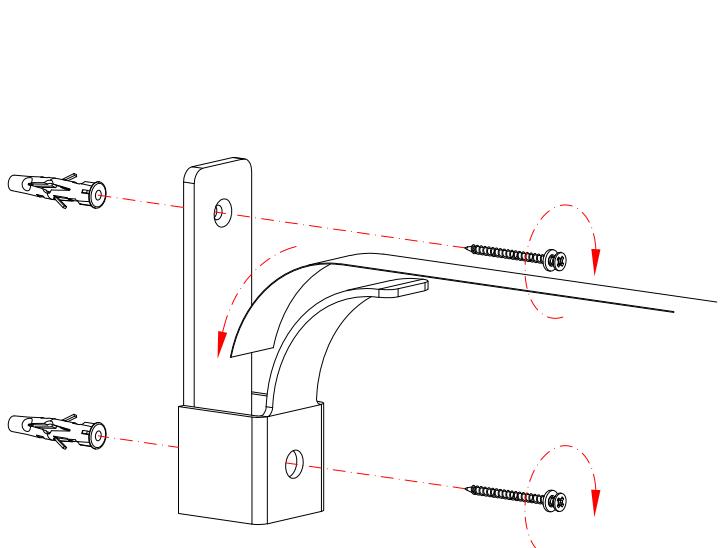

F49 Z05

MOUNTING OF THE CEILING BRACKET

